

LF-FSD037YB

Linear DALI Dimmable NFC Constant Current LED Driver



Product family features

- DALI&PUSH dimmable
- Dim to off without afterglow
- Supports 2 sets of light fixtures connected in series
- Standby power consumption≤0.3W
- Suitable for Class I light fixtures
- 5 years guarantee



Product family benefits

- Advanced functions: EL, CorridorDIM, CLO
- DALI-2 part ext. 251, 252 and 253
- Output current adjustable and parameter set via DALI programmer or NFC
- Comply with Zhaga Book13, 24
- Surge level: PUSH: 1kV; L-N: 1kV; L/N-PG: 2kV

Typical applications

- For linear light and tri-proof light
- For office, commercial and decorative lighting

Product parameters

- Output current 75-400mA
- Output power 18-37W
- Input voltage 198-264Vac

- Output voltage 54-240Vdc
- Efficiency 92%

1

Electrical data


| Input data | |
|---|---|
| Rated supply voltage | 220 240V |
| AC voltage range | 198 264V |
| Mains frequency | 0/50/60Hz |
| Input voltage DC | 180 264V |
| Power factor | ≥0.97 |
| Efficiency in max. power | ≥92% |
| THD | <7% |
| Input current | 0.21A Max |
| Inrush current | 24A ¹⁾ |
| Loading no. on circuit breaker 10 A (B) | 27 |
| Loading no. on circuit breaker 10 A (C) | 46 |
| Loading no. on circuit breaker 16 A (B) | 43 |
| Loading no. on circuit breaker 16 A (C) | 63 |
| Protective conductor current | ≤0.7mA |
| Power input on stand-by | ≤0.3W |
| Output data | |
| Nominal output voltage | 54 240V |
| Nominal output current | 75400mA |
| Default output current | 75mA |
| Current set | NFC/programmer |
| Maximum output power | 37W |
| Nominal output power | 18 37W |
| Output ripple current (100 Hz) | ±3.3 % |
| Flicker | Comply with IEEE Std 1789-2015 |
| CIE SVM | ≤0.4 |
| IEC-Pst | ≤1 |
| Output current tolerance | ±5% |
| Temperature tolerance | ±10% |
| Starting time | <2S |
| Safety | |
| Withstanding voltage | I/P-PG: 1.5kV&5mA&60S; I/P-DA1/DA2, DA1/DA2-PG: 1.5kV&5mA&60S |
| Surge capability (L-N) | 1kV |
| Surge capability (L/N-E) | 2kV |
| PUSH ²⁾ | 1kV |
| Insulation resistance | I/P-PG, I/P-DA1/DA2, DA1/DA2-PG: >100MΩ@500VDC |
| Guarantee | 5 years ³⁾ |

 $_{\rm 2)}$ The surge test wiring at the PUSH terminal is connected in parallel with L-N


³⁾ **5 years @Tc≤85**°C

Characteristic diagram


Operating Window

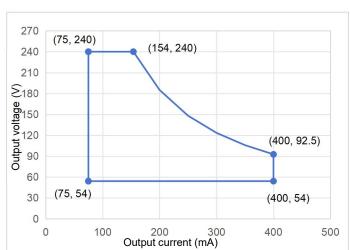


Typical Efficiency vs Load

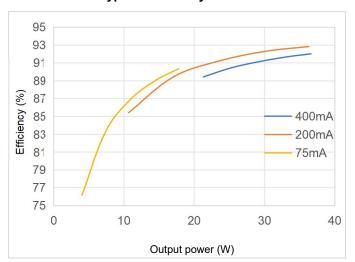


Typical Power Factor vs Load

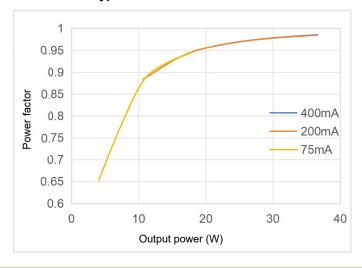


Typical THD vs Load

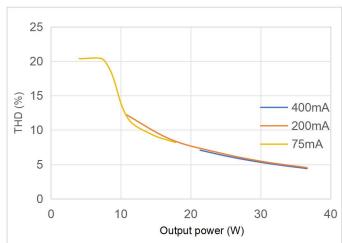

Lifespan

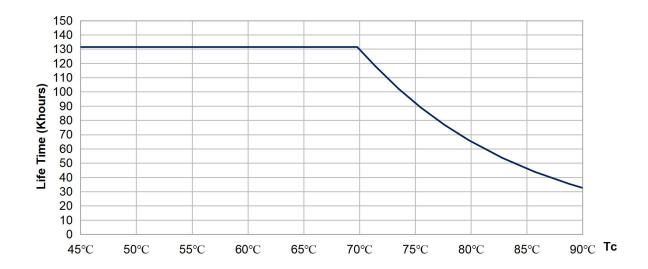

Dimensions

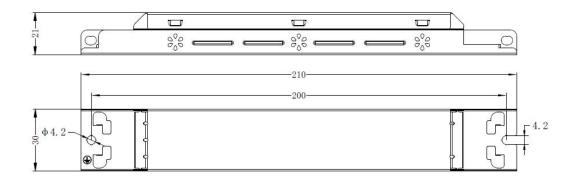


| Mounting hole spacing, length | 200mm |
|--------------------------------------|--------------------|
| Product weight | 136g |
| Cable cross-section, input side | 0.5 1.5 mm² |
| Cable cross-section, output side | 0.5 1.5 mm² |
| Wire preparation length, input side | 7 8mm |
| Wire preparation length, output side | 7 8mm |
| Length | 210mm |
| Width | 30mm |
| Height | 21mm |
| Colors & materials | |
| Casing material | Color coated sheet |
| Casing color | White |

Temperature & operating conditions

| Ambient temperature range | -30°C - +60°C |
|--------------------------------------|---|
| Maximum temperature at tc test point | 85℃ |
| Temperature range at storage | -30°C - +80°C (6 months in Class I environment) |
| Humidity range at storage | 20-75%RH (no condensation) |
| Humidity during operation | 20-95%RH (no condensation) |
| Atmospheric Pressure | 86-106KPa |
| RoHS | RoHS 2.0 (EU) 2015/863 |

 Tc test point




Tc point is at the top of LED driver


Product Terminal

| Input | | Output | | |
|----------|--------------------------|--------------|--|--|
| AC-L | AC live wire input | LED+ (Red) | Positive electrode output of LED driver | |
| AC-N | AC neutral wire input | - (Black) | Negative electrode output of LED series connection | |
| 1 | / | + (Red) | Positive electrode output of LED series connection | |
| ⊕ PG | Earth wire input | LED- (Black) | Negative electrode output of LED driver | |
| DA1 PUSH | DALI1/PUSH dimming input | 1 | / | |
| DA2 PUSH | DALI2/PUSH dimming input | 1 | / | |

Wiring Diagram of Output Terminal

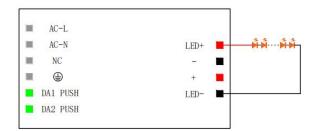

Wiring diagram of single light fixture

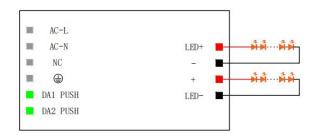


Wiring diagram of double light fixture

Protective Characteristics Schematic

Schematic diagram of input undervoltage protection

100% Protective curve Restore curve (184, 100%) (160, 70%) 80% (150, 70%) 60% 40% 20% (150, 0%) (160, 0%) 0% 140 150 180 190 160 AC Input Voltage (V)

Schematic diagram of input overvoltage protection

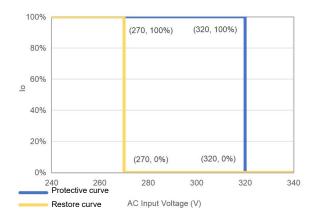

Protective Characteristics


| Protective Type | | Min. | Тур. | Max. | Introduction |
|--------------------|--------------------|--------|--------|--------|---|
| Input Undervoltage | Protective voltage | 145Vac | 150Vac | 155Vac | When the input voltage is lower than the protection voltage, turn off the light. |
| Protection | Restore voltage | 156Vac | 160Vac | 165Vac | When the input voltage is higher than the recovery voltage, the light can be automatically turned on. |
| Input Overvoltage | Protective voltage | 310Vac | 320Vac | 330Vac | When the input voltage is higher than the protection voltage, turn off the light. |
| Protection | Restore voltage | 261Vac | 270Vac | 278Vac | When the input voltage is lower than the recovery voltage, the light can be automatically turned on. |

Capabilities

| - | |
|--|------------------------------------|
| Dimmable | DALI/PUSH dimmable |
| Dimming range | 1 100% |
| Overload protection | Yes |
| Short-circuit protection | Hiccup mode (Automatic reversible) |
| No-load protection | <250V |
| Suitable for fixtures with prot. class | 1 |
| Programming interface | DALI/NFC |
| Control interface | DALI |
| Number of channels | 1 channel |
| CorridorDIM | Yes |
| EL | Yes |
| CLO | Yes |
| DALI Part 251 252 253 | Yes |


Dimming Function Instruction


DALI dimming function

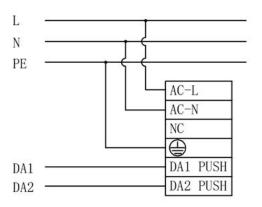

Wiring diagram of DALI dimming

- ① Default setting brightness is 100%.
- ② Connect DALI signal to DA1 PUSH and DA2 PUSH.
- ③ DALI protocol includes Max.16 scene groups.
- (4) Maximum number of LED drivers connected in parallel in DALI dimming mode: 64 pcs.
- ⑤ Minimum dimming depth of DALI dimming: 1%.

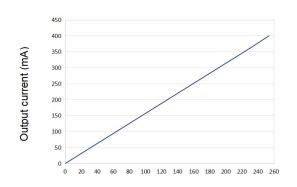

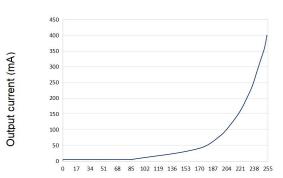


Linear dimming

Logarithmic dimming

Note: Choose only ONE as opposed to use DALI or PUSH at the same time in case of the damage of DALI dimmer.

PUSH dimming function

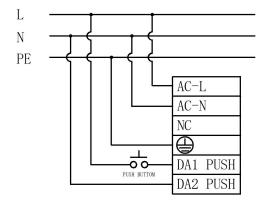

Wiring diagram of PUSH dimming


Switch from DALI mode to PUSH mode: short press PUSH switch to enable PUSH dimming function

- ① Connect PUSH switch between AC-L and DA1 PUSH in series and connect DA2 PUSH to AC-N.
- ② Make sure that AC-L and AC-N are NOT directly connected to DA1 PUSH and DA2 PUSH terminals.
- ③ Make sure that PUSH switch is off before the AC is powered on; operate PUSH after the AC is powered on.
- 4 Make sure the PUSH switch is off before disconnecting the AC.
- (5) If you have any questions about the wiring and operation, please confirm with Lifud FAE.
- (6) Wrong wiring or operation may cause damage to the driver.

| Operation | Duration | Function |
|--------------|----------------|--|
| Instant Push | 0.1-0.5S | LED light on/off |
| Long Push | 0.6-98 | LED light dim up/down |
| Reset Push | > 9S | Reset the brightness of luminaire to 50% |

- ① The PUSH operation won't cause any variations on LED driver if it's less than 0.1S.
- 2 Minimum dimming depth of PUSH dimming: 1%
- ③ The PUSH dimming mode has the memory function in case of any power failure. When the LED driver is powered on again, the light will return to the previous state before power failure.
- ④ The present dimming direction of PUSH dimming is opposite to the former one.
- ⑤ In automatic mode, long press for more than 3 minutes to enter the corridor dimming function.

Corridor dimming function

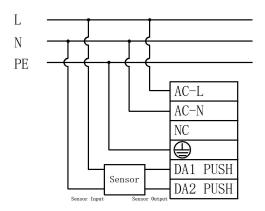

Wiring diagram of corridor dimming

Operations for Entering Corridor Lighting Mode

Approach 1: use Lifud programmer to enable the driver's corridor lighting mode and set parameters.

Approach 2: keep pressing PUSH for 3+ mins so as to switch to the corridor lighting mode.

Approach 3: keep moving in the effective sensing area for 3+ mins (set the sensor's hold time for 3+ mins to enable the corridor lighting mode.

Remarks:

- 1. In the automatic detection mode, the driver can be switched from PUSH mode to corridor lighting mode by approach 2 and 3, its brightness will dim up to 50%; long press for 3 mins and then it dims down and then dims up, which means the driver has entered the corridor lighting mode.
- 2. After activating the corridor dimming mode, PUSH DIM is turned off.

3. In the case of AC input and any level of brightness in the corridor lighting mode, switching DC and then return AC will restart the corridor lighting mode.

Operations for Exiting Corridor Lighting Mode

Approach 1: use Lifud programmer to choose other modes and exit corridor lighting mode.


Approach 2: connect to DALI master and send DALI command, the driver will return to the DALI dimming mode.

Approach 3: connect to the PUSH switch and continuously press it 10 times within 10 secs, the driver will return to the PUSH dimming mode.

Remark:

- 1. The 3-sec or above single press or release will cause the press number to be counted as 0.
- 2. The approach 2 and 3 CANNOT be used if the corridor lighting mode of driver is set via Lifud programmer.

Working Process of Corridor Dimming Mode

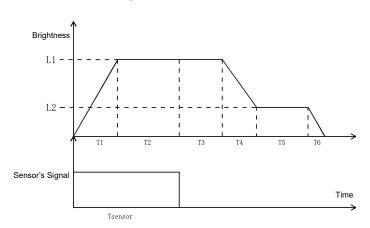

| Symbol | Name | Default value | Available scope setting |
|--------|--------------------------|-------------------|-----------------------------|
| T1 | Fade-in time of sensing | 1s | 0-100s |
| T2 | Holding time of sensing | Depends on sensor | Depends on sensor |
| Т3 | Waiting time of sensing | 180s | 0-59999s, 60000s (infinite) |
| T4 | Fade-out time of sensing | 5s | 0-100s |
| T5 | Unattended time | 60000s (infinite) | 0-59999s, 60000s (infinite) |
| T6 | Fade-out off time | 0s | 0-100s |
| L1 | Sensing brightness | 100% | 0-100% |
| L2 | Unattended brightness | 10% | 0-100% |
| | | | |

Emergency function instruction

The default output current is 15% lo max in the case of DC emergency input.

Emergency input voltage: 180-264Vdc

Note:

- 1. Emergency function can be set by Lifud programmer and programming software(or FEIG NFC reader)
- 2. It can be set from 0 to 100%.
- 3. If the emergency mode is off, input current is DC and the working mode is the same as the AC input.

- 4. In the case of mains input, the brightness is random when using PUSH dimming. When the driver enters the emergency escape lighting system and then reconnects AC, the light brightness will remain the one set via PUSH switch.
- 5. In the case of mains input, the brightness is random when using DALI dimming. When the driver enters the emergency escape lighting system and then reconnects AC, the light brightness will return to the brightness when DALI is powered on.

Programmer tools and software


| Product | Name | Brand | Model | Software |
|-----------------|------------------------------------|-------|---|--------------|
| | NFC programmer | FEIG | ID CPR30+ | LF-NFCReader |
| 3 | NFC handy programmer | FEIG | ID ISC.PRH101-USB | LF-NFCReader |
| | NFC group control programmer | FEIG | ID ISC.LRM1002-E ID ISC.ANT300/300-A | LF-NFCToMP |
| ■ ■ 0000 | Lifud programmer | LIFUD | LF-SCS080C | LF-PRG |
| O amore e | NFC APP | LIFUD | - | Lifud NFC |

Read/write and parameter configuration

| Programming project | Default settings | Parameters settings | Read/Write |
|------------------------|---------------------------------|---------------------|------------|
| Production information | - | No | Read |
| Output current | 75mA (default) | Yes | Read/Write |
| Operating mode | Automatic detection (DALI/PUSH) | Yes | Read/Write |
| EL | 15% (default) | Yes | Read/Write |
| CorridorDIM | Inactivated | Yes | Read/Write |
| CLO | Inactivated | Yes | Read/Write |
| DALI Part 251 | Activated | Yes | Read/Write |
| DALI Part 252 | Activated | Can be reset only | Read/Write |
| DALI Part 253 | Activated | Can be reset only | Read/Write |
| | | • | · |

NFC function instructions


①NFC

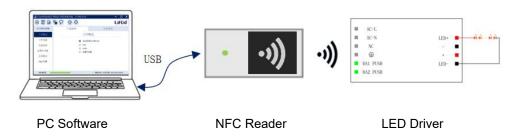

Note: When using the NFC reader, the driver is not allowed to operate while powered on. The driver

must be powered off and completely discharged before it can read and write normally.

2Programmer setting box

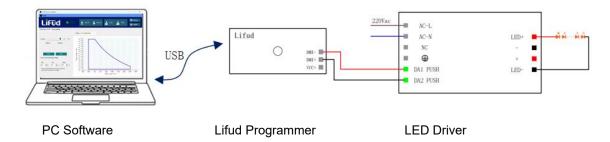

Note: When using the programmer, the driver must be powered on with AC for normal reading and writing.

3NFC APP



Note: When using the NFC APP for parameter setting, the driver is not allowed to operate while powered on. The driver must be powered off and completely discharged before it can read and write normally.

Certificates & standards

| Approval marks | ENEC, UKCA, CE, CB, EL, RCM, DALI-2 |
|--------------------|--|
| Standards | EN 61347-2-13; EN 61347-1; EN 62384; EN 62493; EN 55015; EN 61547; EN 61000-3-2; EN 61000-3-3; IEC61347-1; IEC61347-2-13; EN IEC 61347-2-13 Annex J; AS 61347.2.13 & AS/NZS 61347.1NZS 61347.1 DALI-2 certified (Part 101, 102, 207, 251, 252, 253) |
| Type of protection | IP20 |

Logistical Data

| Product | Packaging unit (Pieces/Unit) | Dimensions (L*W*H) | Volume | Gross weight |
|-------------|---------------------------------|--------------------|----------|--------------|
| LF-FSD037YB | 40 | 385mm*285mm*210mm | 23.04dm³ | 6.42kg±5% |

Test equipment & condition

| Test Equipment | AC power source: CHROMA6530, digital power meter: CHROMA66202, oscilloscope: Tektronix DPO3014, DC electronic load: M9712B, LED board, constant temperature and humidity chamber, lightning surge generator: Everfine EMS61000-5B, rapid group pulse generator: Everfine EMS61000-4A, spectroanalyzer: KH3935, hi-pot tester: EEC SE7440, flicker tester (flicker-free coefficient test): Everfine LFA-3000, etc. |
|-------------------------------|---|
| Compatibility of DALI Dimming | Yuanhao Master, Simon Master, Philips Master DDBC120-DALI, OSRAM Master, Helvar Master 905 Router, Tridonic Master and HDL MC64-DALI431 Master |

If there are no special remarks, the above parameters are tested at the ambient temperature of 25° C, humidity of 50%, maximum output load and input voltage of 230Vac/50Hz.

Additional information

- 1. It is recommended that user install the over voltage protection, under voltage protection and surge protection devices in the power supply circuits of light fixtures to ensure electricity safety.
- 2. The LED driver used in combination with the end device is one of the accessories of the whole light fixture, and the EMC of the whole light fixture is not only susceptible to the driver itself, but to the LED light fixture and the whole light fixture's wiring. Thus, the manufacturer of LED light fixture should re-confirm the EMC of the whole light fixture before the whole light fixture is finished.
 - 3. Configure the quantity of circuit breakers based on inrush current and time.
- 4. The PC cover, casing and end cap for assembling the LED driver in the light fixture must meet the fire rating of UL94-V0 or above.
 - 5. DC input is only for emergency.
- 6. In no-load condition, it is recommended that user not directly connect the LED driver to the light fixture in case that the light fixture is damaged.
 - 7. It is well-advised that the withstanding voltage of LEDs and aluminum substrates >3kVac.
- 8. When the load power of the product is <37W, it will output at the set constant current; when the load power is >37W, it will output at a constant power of 37W±1.5W.
 - 9. The default current of LED driver is 75mA and it can be set by FEIG NFC reader or Lifud programmer.
 - 10. When using other DALI masters, please test their compatibilities with Lifud LED driver in advance.
- 11. If the parasitic capacitance between LEDs and the PCBA is too large, and the light fixture is grounding, there will be a slight flicker at the moment of power on.
 - 12. Lifud Technology Co., Ltd. reserves the right to interpret any contents of this specification.

Transportation & storage

Suitable transportation means: vehicles, boats and aeroplanes.

In transit, it is necessary to prepare awnings for rain or sun protection. Moreover, please keep civilized loading and unloading to prevent the vibration or impact of LED driver as much as possible.

The storage of LED driver shall conform to the standard of Class I environment. When using LED drivers which have been stored for more than 6 months, please re-test them firstly. Do not use them unless they are tested to be qualified.

Cautions

Please use Lifud LED driver according to its parameters in the specification, otherwise the LED driver may malfunction.

Using any incompatible light fixtures or those that have not been certified may cause fire, explosion or other risks.

Man-made damage is beyond the scope of Lifud warranty service.

Disclaimer

Subject to change without notice. Errors and omission excepted. Always make sure to use the most recent release.